




INSTALLATION and OPERATION MANUAL

SOFTWARE VERSION **3.2x** (includes R77 version)
code **81601F** / edition **12 - 06/09**

1 · INSTALLATION

· Dimensions and cut-out; panel mounting

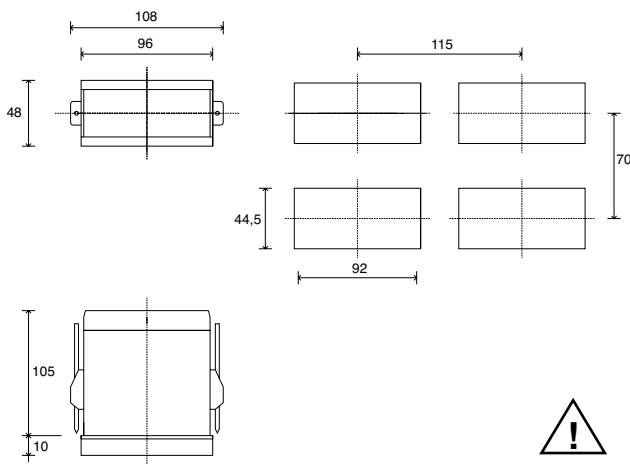

For correct and safe installation, follow the instructions and observe the warnings contained in this manual.

Panel mounting:

Fix the device with the bracket provided before making any electrical connections.
To mount two or more devices side by side, use the cut-out dimensions shown above.

CE MARKING: The instrument conforms to the European Directives 2004/108/CE and 2006/95/CE with reference to the generic standards:

EN 61000-6-2 (immunity in industrial environment) **EN 61000-6-3** (emission in residential environment) **EN 61010-1** (safety).

MAINTENANCE: Repairs must be done out only by trained and specialized personnel. Cut power to the device before accessing internal parts.

Do not clean the case with hydrocarbon-based solvents (Petrol, Trichlorethylene, etc.).

Use of these solvents can reduce the mechanical reliability of the device. Use a cloth dampened in ethyl alcohol or water to clean the external plastic case.

SERVICE: GEF 4T 96 has a service department.

The warranty excludes defects caused by any use not conforming to these instructions.

2 · TECHNICAL SPECIFICATIONS

Display	3, 4 digit red LED's digit height 20mm (3 digits), digit height 14mm (4 digits)
Keys	3 mechanical keys (Raise, Lower, F)
Accuracy	0.2% f.s. at 25°C, amb. temperature ts
Thermal drift	=120msec
Resolution	0.005% f.s./°C
(unction of settable sample time)	120msec, >14bit 60msec, >14bit (only for linear inputs) 30msec, >13bit (only for linear inputs) 15msec, >12bit (only for linear inputs)
Main input	TC, RTD, PTC, NTC 60mV, 1V Ri ≥ 1MΩ; 5V, 10V Ri ≥ 10KΩ 20mA, Ri = 50Ω. adjustable digital filter
Thermocouples	J, K, R, S, T, B, E, N (IEC 584-1, CEI EN 60584-1, 60584-2) L GOST, U, G, D, C. Custom linearization available on request
Cold junction error	0,1° / °C
RTD type (scale configurable within indicated range, with or without decimal point)	DIN 43760 (PT100), JPT100
Max. RTD line resistance	20Ω
PTC type / NTC type	990Ω, 25°C / 1KΩ, 25°C
Max non-linearity error	See tp parameter
°C / °F selection	Faceplate configurable
Linear scale range	-1999...9999 (with 4 digit display) -999...999 (with 3 digit display); punto Configurable decimal point position, possible 32 segment linearization
Logic input (only R77 version)	24V, 5mA (Ri = 47KΩ) isolation 1500V or voltage-freecontact
Transmitter / Sensor power Supply (option)	24V ±10%, 50mA 15V for transmitter, max. 50mA 1,2V for potentiometer > 100Ω
Power supply (switching)	(std) 100...240Vac/dc ±10%, 50/60Hz, 18VA (opt) 11...27Vac/dc ±10%, 50/60Hz, 11VA
Fuse (inside device, not operator serviceable)	100 to 240VAC/DC - type T-500mA-250V 11 to 27VAC/DC - type T - 1,25A - 250V
Faceplate protection	IP65
Working / Storage temperat.	0 to 50°C / -20 to 70°C
Relative humidity	20 to 85% Ur non condensing
Environmental conditions of use	for internal use only, altitude up to 2000m
Installation	Panel mounting, extractable from front
Weight	280 g for the complete version

EMC conformity has been tested with the following connections

FUNCTION	CABLE	LENGTH. USED
TC input probe	0,8 mm ² compensated	5 mt
"PT100" input probe	1 mm ²	3 mt
Power supply cable	1 mm ²	1 mt

3 · DESCRIPTION OF FRONT PANEL

"Raise" and "Lower" keys:

These keys are used for any operation that requires a numerical parameter to be raised or lowered. •• The speed of change is proportional to the time the key is pressed. •• The operation is not cyclic: once the maximum (minimum) limit is reached, there will be no further increase (decrease) of the value, even if the key remains pressed.

The keys can be configured to perform reset, hold, display of the peak value, etc. as determined by the 't.U.' and 't.d.' parameters on the 'In' menu.


PV display: Indication of process variable •• Indication of 'HI' or 'Lo' out of range •• Indication of open circuit (br) or short circuit (Er) •• Display of configuration and calibration messages

Label with engineering units



Function key:
Gives access to different configuration stages •• Confirms any parameter changes

4 · CONNECTIONS

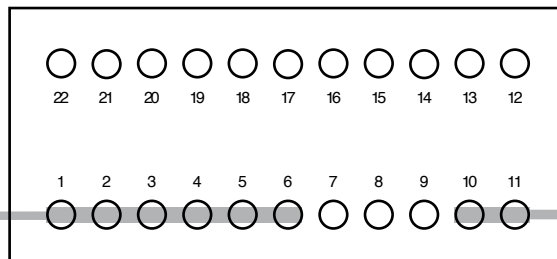

• Power supply


Standard: 100 to 240VAC/DC ±10%	
Optional: 11 to 27VAC/DC ±10%	
50/60Hz, 8VA max.	

• Inputs


• Thermocouples

Available thermocouples:
J, K, R, S, T, B, E, N,
L, U, G, D, C


- Respect polarities
- For extensions,
use compensated
cable appropriate for
thermocouple.

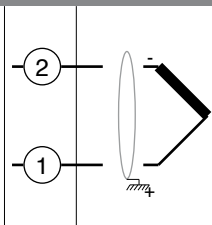

• Linear input with 2-wire transmitter

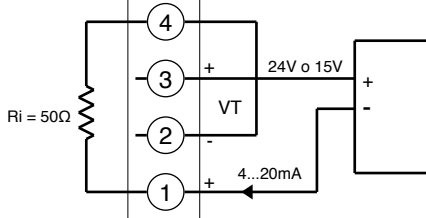


• Linear input with 3-wire transmitter

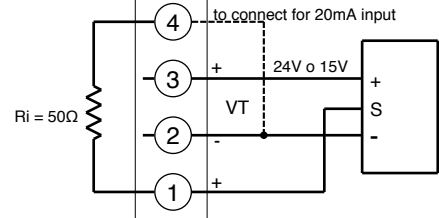


• Pt100 / PTC / NTC


Use wires of
adequate thickness
(min. 1mm²)
PT100, JPT100,
PTC, NTC

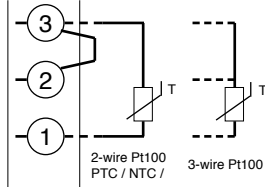


• Linear input 1V for potentiometer

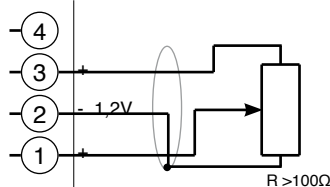

• Linear (I)

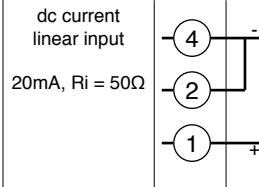


• Linear (V)

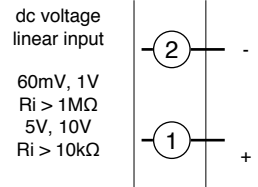


• Digital input

Digital input
24V, 5mA
or no-voltage contact
(only version R77)

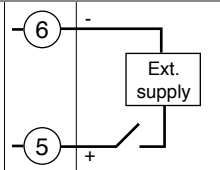


Connections for keylock function through digital input (require selection +VT for the signal on contact 3)





OFF (open): keyboard enable
ON (closed): keyboard disable


Device structure: identification of boards

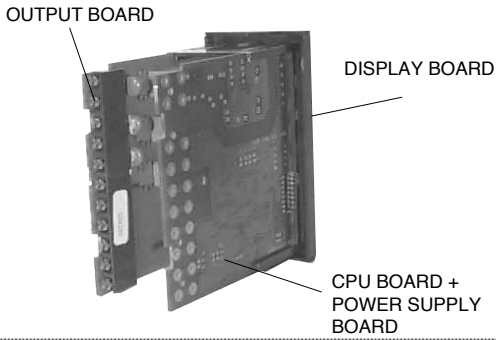

OUTPUT BOARD
Selection for transmitter supply (version ... 99)

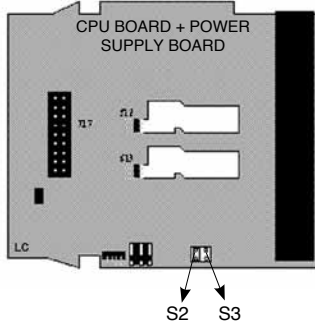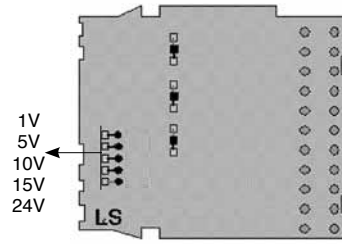


	RTD, PTC, NTC Input	Transmitter and Potent. Supply
S2	ON	OFF
S3	OFF	ON

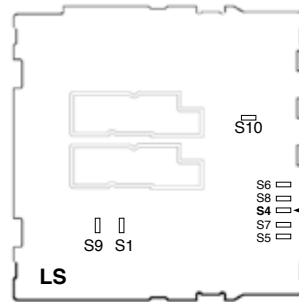


Jumper S4 is normally closed.
To change its state, the connection has
to be removed.
This operation must be done by trained
technical personnel.

ACCESS TO THE MENU
(S4)

5 · PROGRAMMING and CONFIGURATION

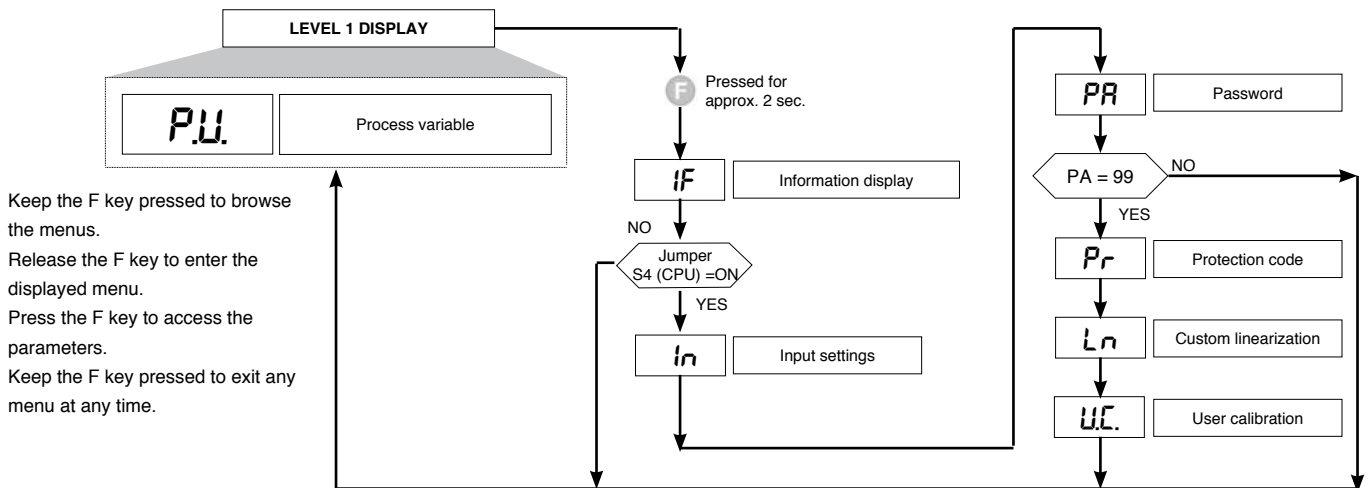


· Information display

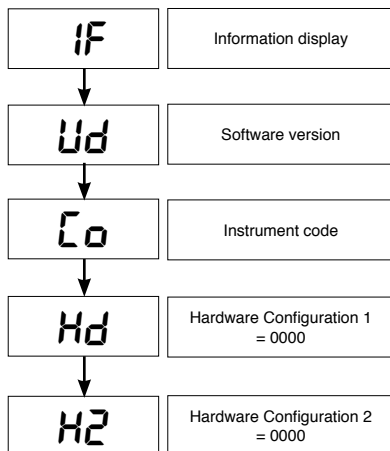


DIGITAL INPUT
(only version R77)

0 = Absent
7 = Present

• TC/LIN input parameters

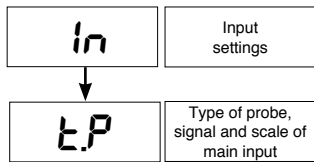

TYPE	Type PROBE	4 DIGIT		3 DIGIT + sign	
		without dec. point	with dec. point	without dec. point	with dec. point
Probe: TC					
0	TC J °C	0/1000	0.0/999.9	0/999	0.0/99.9
1	TC J °F	32/1832	32.0/999.9	32/999	32.0/99.9
2	TC K °C	0/1300	0.0/999.9	0/999	0.0/99.9
3	TC K °F	32/2372	32.0/999.9	32/999	32.0/99.9
4	TC R °C	0/1750	0.0/999.9	0/999	0.0/99.9
5	TC R °F	32/3182	32.0/999.9	32/999	32.0/99.9
6	TC S °C	0/1750	0.0/999.9	0/999	0.0/99.9
7	TC S °F	32/3182	32.0/999.9	32/999	32.0/99.9
8	TC T °C	-200/400	-199.9/400.0	-200/400	-99.9/99.9
9	TC T °F	-328/752	-199.9/752.0	-328/752	-99.9/99.9
10	TC B °C	44/1800	44.0/999.9	not available	not available
11	TC B °F	111/3272	111.0/999.9	not available	not available
12	TC E °C	-100/750	-100.0/750.0	-100/750	not available
13	TC E °F	-148/1382	-148.0/999.9	-148/999	not available
14	TC N °C	0/1300	0.0/999.9	0/999	not available
15	TC N °F	32/2372	32.0/999.9	32/999	not available
16	TC L-GOST °C	0/600	0.0/600.0	0/600	0.0/99.9
17	TC L-GOST °F	32/1112	32.0/999.9	32/999	32.0/99.9
18	TC U °C	-200/400	-199.9/400.0	-200/400	-99.9/99.9
19	TC U °F	-328/752	-199.9/752.0	-328/752	-99.9/99.9
20	TC G °C	0/2300	0.0/999.9	0/999	not available
21	TC G °F	32/4172	32.0/999.9	32/999	not available
22	TC D °C	0/2300	0.0/999.9	0/999	not available
23	TC D °F	32/4172	32.0/999.9	32/999	not available
24	TC C °C	0/2300	0.0/999.9	0/999	not available
25	TC C °F	32/4172	32.0/999.9	32/999	not available
26	TC °C	Custom	Custom	Custom	Custom
27	TC °F	Custom	Custom	Custom	Custom
Probe: RTD					
28	PT100 °C	-200/850	-199.9/850.0	-200/850	-99.9/99.9
29	PT100 °F	-328/1562	-199.9/999.9	-328/999	-99.9/99.9
30	JPT100 °C	-200/600	-199.9/600.0	-200/600	-99.9/99.9
31	JPT100 °F	-328/1112	-199.9/999.9	-328/999	-99.9/99.9
Probe: PTC - NTC					
32	PTC °C	-55/120	-55.0/120.0	-55/120	-55.0/99.9
33	PTC °F	-67/248	-67.0/248.0	-67/248	-67.0/99.9
34	NTC °C	-10/70	-10.0/70.0	-10/70	-10.0/70.0
35	NTC °F	14/158	14.0/158.0	14/158	14.0/99.9
Probe: Voltage + Current					
36	0...60mV	-1999/9999	-199.9/999.9	-999/999	-99.9/99.9
37	0...60mV	linear custom	linear custom	linear custom	linear custom
38	12...60mV	-1999/9999	-199.9/999.9	-999/999	-99.9/99.9
39	12...60mV	linear custom	linear custom	linear custom	linear custom
40	0...20mA	-1999/9999	-199.9/999.9	-999/999	-99.9/99.9
41	0...20mA	linear custom	linear custom	linear custom	linear custom
42	4...20mA	-1999/9999	-199.9/999.9	-999/999	-99.9/99.9
43	4...20mA	linear custom	linear custom	linear custom	linear custom
44	0...10V	-1999/9999	-199.9/999.9	-999/999	-99.9/99.9
45	0...10V	linear custom	linear custom	linear custom	linear custom
46	2...10V	-1999/9999	-199.9/999.9	-999/999	-99.9/99.9
47	2...10V	linear custom	linear custom	linear custom	linear custom
48	0...5V	-1999/9999	-199.9/999.9	-999/999	-99.9/99.9
49	0...5V	linear custom	linear custom	linear custom	linear custom
50	1...5V	-1999/9999	-199.9/999.9	-999/999	-99.9/99.9
51	1...5V	linear custom	linear custom	linear custom	linear custom
52	0...1V/POT	-1999/9999	-199.9/999.9	-999/999	-99.9/99.9
53	0...1V/POT	linear custom	linear custom	linear custom	linear custom
54	200mV...1V	-1999/9999	-199.9/999.9	-999/999	-99.9/99.9
55	200mV...1V	linear custom	linear custom	linear custom	linear custom
Probe: Custom PT100 - PTC - NTC					
56	PT100	custom	custom	custom	custom
57	JPT	custom	custom	custom	custom
58	PTC	custom	custom	custom	custom
	NTC	custom	custom	custom	custom

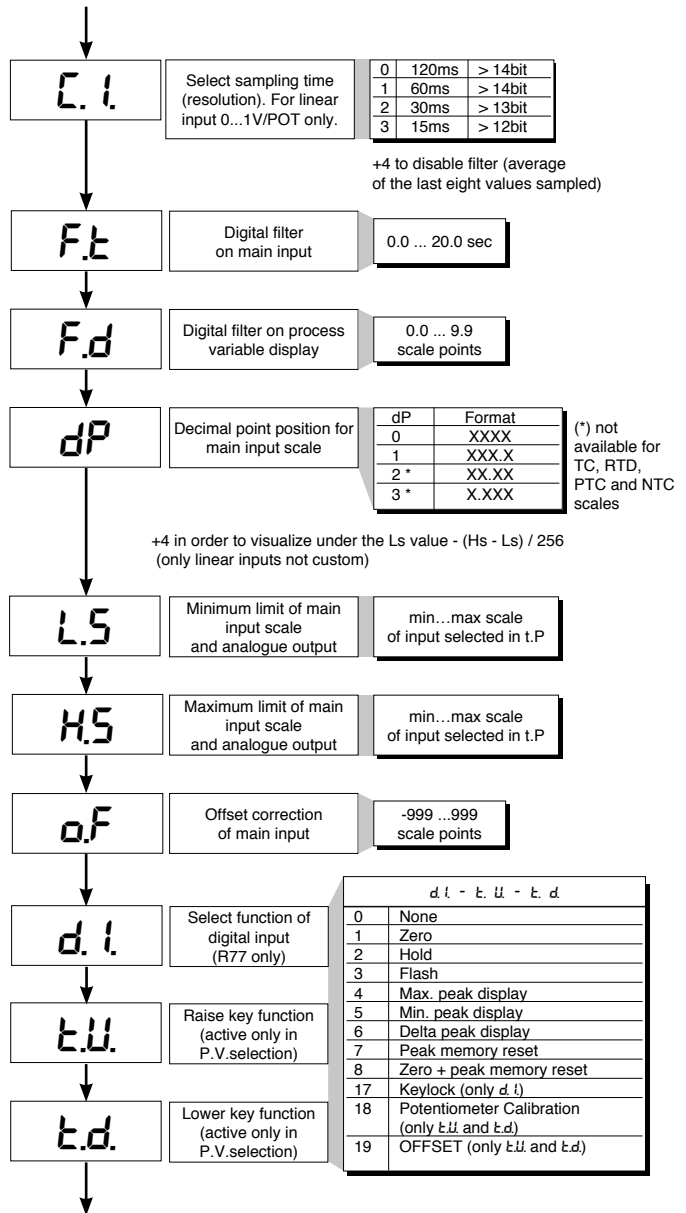

N.B.: for the version R77 are not available the probe codes 0...39, 48...51, 54...58

In case of probe non-availability, maximum and minimum limits are set to 0.

In case of custom linearization, test limits for setting LO and HI errors are given by the calibration values. If these limits are not exceeded, they are taken into consideration as limits LO_S and HI_S.

<p>Max. non-linearity error for thermocouples (TC), resistors (PT100) and thermistors (PTC, NTC).</p> <p>The error is calculated as deviation from theoretical value and is expressed as percentage of full scale (in °C).</p>	<p>S, R range 0...1750°C; error < 0.2% f.s. (t > 300°C) / for other range; error < 0.5% f.s.</p> <p>T error < 0.2% f.s. (t > -150°C)</p> <p>B range 44...1800°C; error < 0.5% f.s. (t > 300°C) / range 44,0...999,9; error < 1% f.s. (t > 300°C)</p> <p>U range -99,9...99,9 and -99...99°C; error < 0.5% f.s. / for other range; error < 0.2% f.s. (t > -150°C)</p> <p>G error < 0.2% f.s. (t > 300°C)</p> <p>D error < 0.2% f.s. (t > 200°C)</p> <p>C range 0...2300; error < 0.2% f.s. / for other range; error < 0.5% f.s.</p>
	<p>NTC error < 0.5% f.s.</p> <p>Tc: J, K, E, N, L error < 0.2% f.s.</p> <p>PT100, JPT100 and PTC error < 0.2% f.s.</p>


• Protection

Pr


Protection code = 0

- +4 to disable In
- +16 to enable maintenance of reset latch at power-off (for linear inputs only)
- +32 base configuration (the following parameters will not be displayed:
In: Ft, Fd, Of
Ft, Fd, Of remain at set value)
- +128 Disable of all the pages except P.A (Password)

• Custom linearization

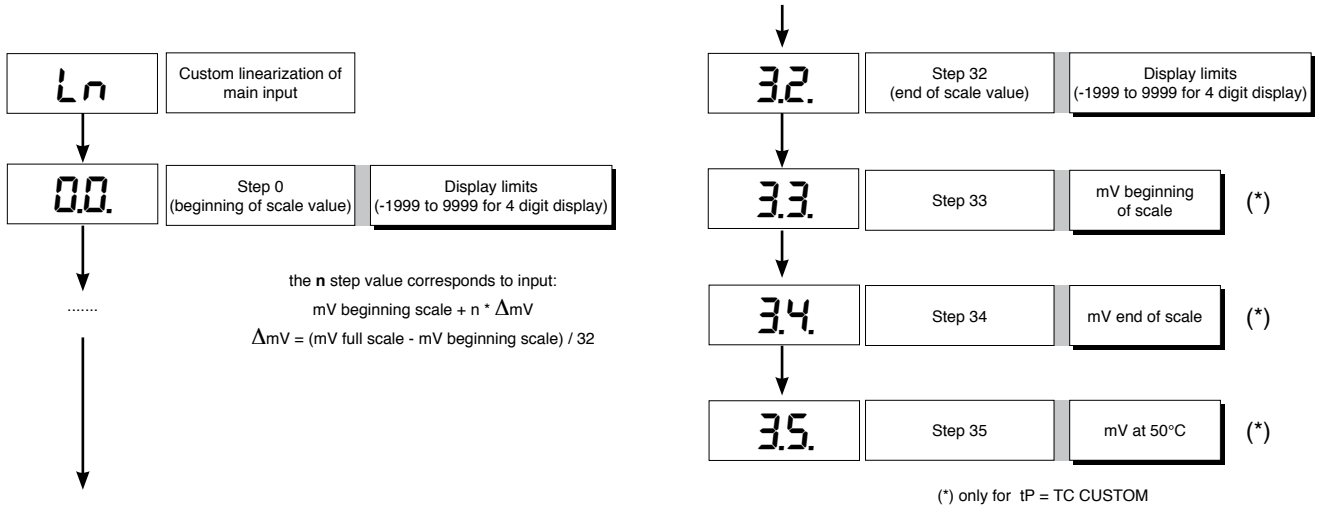

• User calibration

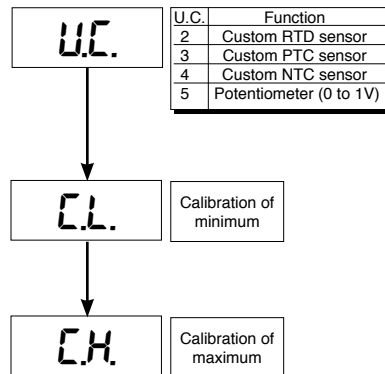

• Interface for GEFRAN instrument configuration

KIT PC USB / RS485 o TTL



Kit for PC via the USB port (Windows environment) for GEFRAN instruments configuration:

- Lets you read or write all of the parameters
 - A single software for all models
 - Easy and rapid configuration
 - Saving and management of parameter recipes
 - On-line trend and saving of historical data
- Component Kit:
- Connection cable PC USB ... port TTL
 - Connection cable PC USB ... RS485 port
 - Serial line converter
 - CD SW GF Express installation




• ORDERING CODE

GF_eXK-2-0-0

cod F049095

ORDER CODE

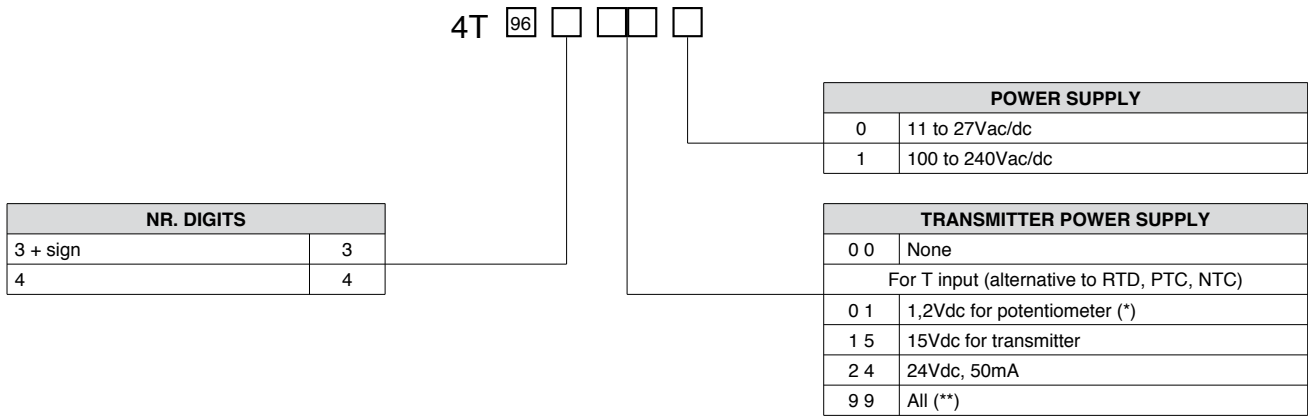

(*) R77 for version with potentiometer input ($R_{input} > 10M\Omega$)
 (**) Selectable (standard = 24Vdc)

Please, contact GEFTRAN sales people for the codes availability.

• WARNINGS



WARNING: this symbol indicates danger. It is seen near the power supply circuit and near high-voltage relay contacts.

Read the following warnings before installing, connecting or using the device:

- follow instructions precisely when connecting the device.
- always use cables that are suitable for the voltage and current levels indicated in the technical specifications.
- the device has no ON/OFF switch: it switches on immediately when power is turned on. For safety reasons, devices permanently connected to the power supply require a two-phase disconnecting switch with proper marking. Such switch must be located near the device and must be easily reachable by the user. A single switch can control several units.
- if the device is connected to electrically NON-ISOLATED equipment (e.g. thermocouples), a grounding wire must be applied to assure that this connection is not made directly through the machine structure.
- if the device is used in applications where there is risk of injury to persons and/or damage to machines or materials, it MUST be used with auxiliary alarm units. You should be able to check the correct operation of such units during normal operation of the device.
- before using the device, the user must check that all device parameters are correctly set in order to avoid injury to persons and/or damage to property.
- the device must NOT be used in inflammable or explosive environments. It may be connected to units operating in such environments only by means of suitable interfaces in conformity to local safety regulations.
- the device contains components that are sensitive to static electrical discharges. Therefore, take appropriate precautions when handling electronic circuit boards in order to prevent permanent damage to these components.

Installation: installation category II, pollution level 2, double isolation

- only for low power supply: supply from Class 2 or low voltage limited energy source
- power supply lines must be separated from device input and output lines; always check that the supply voltage matches the voltage indicated on the device label.
- install the instrumentation separately from the relays and power switching devices
- do not install high-power remote switches, contactors, relays, thyristor power units (particularly if "phase angle" type), motors, etc... in the same cabinet.
- avoid dust, humidity, corrosive gases and heat sources.
- do not close the ventilation holes; working temperature must be in the range of 0...50°C.
- surrounding air: 50°C
- use 60/75°C copper (Cu) conductor only, wire size range 2 x No 22 - 14 AWG, Solid/Stranded
- use terminal tightening torque 0.5Nm

If the device has faston terminals, they must be protected and isolated; if the device has screw terminals, wires should be attached at least in pairs.

- **Power:** supplied from a disconnecting switch with fuse for the device section; path of wires from switch to devices should be as straight as possible; the same supply should not be used to power relays, contactors, solenoid valves, etc.; if the voltage waveform is strongly distorted by thyristor switching units or by electric motors, it is recommended that an isolation transformer be used only for the devices, connecting the screen to ground; it is important for the electrical system to have a good ground connection; voltage between neutral and ground must not exceed 1V and resistance must be less than 60hm; if the supply voltage is highly variable, use a voltage stabilizer for the device; use line filters in the vicinity of high frequency generators or arc welders; power supply lines must be separated from device input and output lines; always check that the supply voltage matches the voltage indicated on the device label.

- **Input and output connections:** external connected circuits must have double insulation; to connect analog inputs (TC, RTD) you have to: physically separate input wiring from power supply wiring, from output wiring, and from power connections; use twisted and screened cables, with screen connected to ground at only one point; to connect adjustment and alarm outputs (contactors, solenoid valves, motors, fans, etc.), install RC groups (resistor and capacitor in series) in parallel with inductive loads that work in AC (*Note: all capacitors must conform to VDE standards (class x2) and support at least 220 VAC. Resistors must be at least 2W*); fit a 1N4007 diode in parallel with the coil of inductive loads that operate in DC.

GEFRAN spa will not be held liable for any injury to persons and/or damage to property deriving from tampering, from any incorrect or erroneous use, or from any use not conforming to the device specifications.